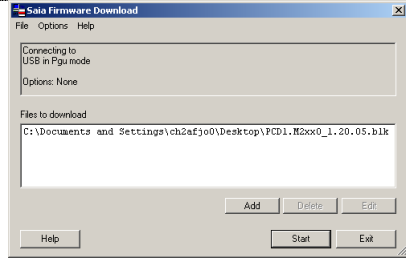

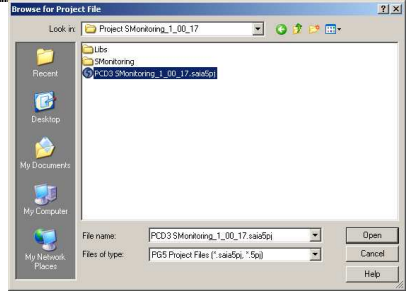
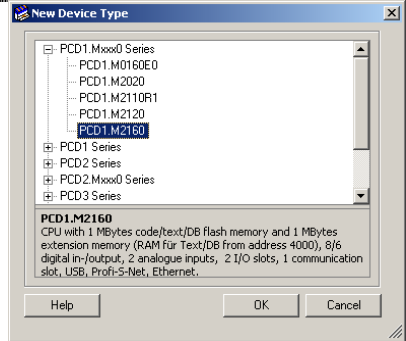
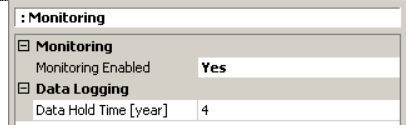
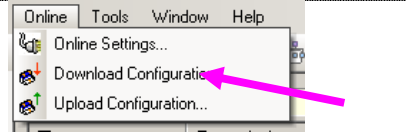
 
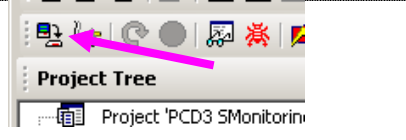


## Update Saia® PCD with S-Monitoring

This document describes how to update a standard Saia® PCD with S-Monitoring application.

<p><b>1. PCD Power ON</b></p>	
<p><b>2. Update firmware with Saia FW Downloader</b> Over USB or TCP/IP</p> <p><b>!</b> Caution: According to the previous firmware version, the INTFLASH will be formatted!</p>	
<p><b>3. Launch PG5 program</b></p>	
<p><b>4. Open PG5 project</b></p>	
<p><b>5. Select PCD device type</b> (p.e. PCD1.M2160)</p>	
<p><b>6. Enable "Monitoring"-function in Device Configurator</b> "No" → "Yes" If the function is enabled, more parameter can be configured. More Information in „S-Monitoring Manual“.</p>	
<p><b>7. Download configuration into PCD</b></p>	
<p><b>8. Rebuild program</b></p>	
<p><b>9. Download program into PCD</b></p>	
<p><b>10. Copy webpages over FTP in folder INTFLASH/WEBPAGES of the PCD</b></p> <p><b>!</b> Caution: Do not copy the tcr-file into PCD!</p>	