# Honeywell

# PCD3.S100 Workshop Input/Output simulator unit



## Description

Input/Output Simulator for HPCD3.M/.T/.C (e.g. for test assembly or workshop models).


The PCD3.S100 workshop simulator unit is only designed for use in workshops and training courses.

It does not meet the requirements of general applications: it is not approved or calibrated, there are no thorough tests of the mechanical and electrical properties, and no guarantees regarding availability or repair.



PCD3.S100

| Scope of functions |                  |                |  |  |  |  |
|--------------------|------------------|----------------|--|--|--|--|
|                    | Address          | Corresponds to | Function   |  |  |  |
| Digital inputs     | Base address +0  | PCD3.E110      | 8 switches to simulate digital inputs  |  |  |  |
| Digital outputs    | Base address +16 | PCD3.A400      | 8 LEDs to display the status of digital outputs                                  |  |  |  |
| Analogue inputs    | Base address +32 | PCD3.W200      | 4 potentiometers (~270° rotation) to simulate analogue inputs, 10 bit resolution |  |  |  |
| Analogue outputs   | Base address +48 | PCD3.W400      | 2 LED histograms with 10 segments, to simulate analogue outputs                  |  |  |  |

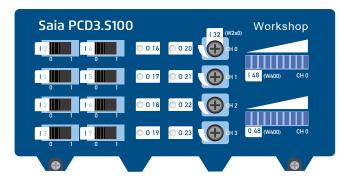

| Technical data                                |                                    |  |  |  |  |
|---|------------------------------------|--|--|--|--|
|   | Value                              |  |  |  |  |
| Internal current consumption (from +5 V bus)  | max. 70 mA                         |  |  |  |  |
| Internal current consumption<br>(from V+ bus) | 0 mA                               |  |  |  |  |
| External current consumption                  |                                    |  |  |  |  |
| Terminals                                     | No connections for external wiring |  |  |  |  |

# Assembly instructions

| Step-by-step approach |   |  |  |  |  |  |  |
|-----------------------|---|--|--|--|--|--|--|
| Step                  | Procedure   |  |  |  |  |  |  |
| 1                     | Remove or disable power supply to the CPU.  |  |  |  |  |  |  |
| 2                     | Connect the bus plate to the I/O bus. Ensure<br>that the bus plate is firmly positioned in the I/O<br>bus sockets, and that the grooves line up with<br>the guides; see arrows. |  |  |  |  |  |  |
| 3                     | First insert the bus plate,<br>then locate the front plate on the module holder.  |  |  |  |  |  |  |
| 4                     | Fix with the two screws provided.   |  |  |  |  |  |  |



PCD3.S100

| Ordering information |                        |   |        |  |  |
|----------------------|------------------------|---|--------|--|--|
| Туре                 | Short description      | Description   | Weight |  |  |
| PCD3.S100            | Input/Output Simulator | Input/Output Simulator for HPCD3.M/.T/.C (for ex. for test assembly or workshop models) | 180 g  |  |  |



#### ATTENTION

These devices must only be installed by a professional electrician, otherwise there is the risk of fire or the risk of an electric shock.



## WARNING

Product is not intended to be 0used in safety critical applications, using it in safety critical applications is unsafe.



# WARNING - SAFETY

The unit is not suitable for the explosion-proof areas and the areas of use excluded in EN61010 Part 1.



# WARNING - SAFETY

Check compliance with nominal voltage before commissioning the device (see type label). Check that connection cables are free from damage and that, when wiring up the device, they are not connected to voltage. Do not use a damaged device !



#### NOTE

In order to avoid moisture in the device due to condensate build-up, acclimatise the device at room temperature for about half an hour before connecting.



# CLEANING

The device can be cleaned in dead state with a dry cloth or cloth soaked in soap solution. Do not use caustic or solvent-containing substances for cleaning.



# MAINTENANCE

These devices are maintenance-free. If damaged, no repairs should be undertaken by the user.



Observe this instructions (data sheet) and keep them in a safe place. Pass on the instructions (data sheet) to any future user.



WEEE Directive 2012/19/EC Waste Electrical and Electronic Equipment directive The product should not be disposed of with other household waste. Check for the nearest authorized collection centers or authorized recyclers. The correct disposal of end-of-life equipment will help prevent potential negative consequences for the environment and human health.



EAC Mark of Conformity for Machinery Exports to Russia, Kazakhstan or Belarus.

#### Sales and Service

For application assistance, current specifications, pricing, or name of the nearest Authorized Distributor, contact one of the offices below.

Honeywell Process Solutions,

+44 (0)1344 656000

FP-Sales-Apps@Honeywell.com

(TAC) hfs-tac-support@honeywell.com

Phone: +80012026455 or

**EMEA** 

Email: (Sales)

or

#### **ASIA PACIFIC**

Honeywell Process Solutions, (TAC) <u>hfs-tac-support@honeywell.com</u>

#### Australia

Honeywell Limited Phone: +(61) 7-3846 1255 FAX: +(61) 7-3840 6481 Toll Free 1300-36-39-36 Toll Free Fax: 1300-36-04-70

#### China – PRC - Shanghai

Honeywell China Inc. Phone: (86-21) 5257-4568 Fax: (86-21) 6237-2826

#### Singapore

Honeywell Pte Ltd. Phone: +(65) 6580 3278 Fax: +(65) 6445-3033

#### South Korea

Honevwell Korea Co Ltd Phone: +(822) 799 6114 Fax: +(822) 792 9015

#### WARRANTY/REMEDY

Honeywell warrants goods of its manufacture as being free of defective materials and faulty workmanship. Contact your local sales office for warranty information. If warranted goods are returned to Honeywell during the period of coverage, Honeywell will repair or replace without charge those items it finds defective. The foregoing is Buyer's sole remedy and is in lieu of all other warranties, expressed or implied, including those of merchantability and fitness for a particular purpose. Specifications may change without notice. The information we supply is believed to be accurate and reliable as of this printing. However, we assume no responsibility for its use.

While we provide application assistance personally, through our literature and the Honeywell web site, it is up to the customer to determine the suitability of the product in the application.

Specifications are subject to change without notice.

#### For more information

Learn more about ControlEdge PCD, visit our website www.honeywellprocess.com/ControlEdgePCD or contact your Honeywell account manager.

#### **Honeywell Process Solutions**

Building #1, 555 Huanke Road,

2101 CityWest Blvd, Houston TX 77042 Honeywell House, Skimped Hill Lane

Bracknell, Berkshire, England RG12 1EB UK ©2020 Honeywell International Inc.

Zhangjiang Hi-Tech Industrial Park, Pudong New Area, Shanghai 201203 Document No.: 51-52-03-77 Rev.1.1 July 2020

#### AMERICA'S

Honeywell Process Solutions, Phone: (TAC) 1-800-423-9883 or 215/641-3610 (Sales) 1-800-343-0228

Email: (Sales) FP-Sales-Apps@Honeywell.com or (TAC) hfs-tac-support@honeywell.com

Honeywell

www.honeywellprocess.com